

Alumet®



Instructions for cleaning & maintaining anodized material on façades with Eloxalreiniger FA



Available cleaning products:

1

Magic Eraser

For small scratches and heavily soiled small spots.



2

AluPolish Tube


For heavily soiled spots and suction cup marks.



3

Eloxalreiniger FA

For lightly soiled spots and for the final polishing after treatment with the Magic Eraser and Alupolish.

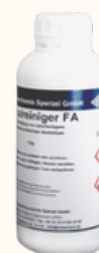

4

Dishwashing Detergent

Rinse the surface again with demi water to remove any residue.



Cleaning Methods
by
Alumet[®]



Method 1

Basic cleaning with demi water

Initial rinse

1

Rinse the surface with demineralized water to remove loose dirt and dust.

2

Complete drying

Allow the surface to dry completely. Air drying can be more effective as you can wash again if dirt is visible.



Method 2

Basic cleaning with Eloxalreiniger

1

Initial rinse

Rinse the surface with demineralized water to remove loose dirt and dust.

2

Cleaner application

Apply Eloxalreiniger FA on the surface.

3

Cleaner drying

Let the cleaner dry on the surface.

4

Final rinse

Rinse the surface again with demi water to remove any residue.

5

Final drying

Allow the surface to dry completely. Air drying can be more effective as you can wash again if dirt is visible.



Method 3

Recommended cleaning with Eloxalreiniger

Initial rinse

1

Rinse the surface with demineralized water to remove loose dirt and dust.

Cleaner application

2

Apply Eloxalreiniger FA on the surface.

Cleaner drying

3

Use a soft brush or cloth to gently scrub the surface, ensuring all areas are covered.

Final rinse

4

Let the cleaner sit for a few minutes to break down dirt and stains.

Final drying

5

Rinse the surface thoroughly with demi water to remove all residues.

Final drying

6

Allow the surface to dry completely. Air drying can be more effective as you can wash again if dirt is visible.



Instructions step by step

Initial rinse with Demi water

1

Thoroughly rinse the anodized surface with demi water to remove loose dirt and superficial stains.

Application of Eloxalreiniger FA

2

- Spray Eloxalreiniger FA evenly across the surface. Ensure generous application but avoid excessive runoff.
 - For vertical surfaces, start spraying from the bottom and work your way up to avoid streaks.
-

Agitation and deep cleaning

3

- Using a soft-bristled brush or microfiber cloth, gently scrub the surface. Focus on areas with visible stains or heavier soiling.
- Allow the cleaner to sit for 5-10 minutes to break down dirt and contaminants.



Instructions step by step

Secondary Rinse with Demi Water

4

- After the cleaner has taken effect, rinse thoroughly with Demi water to remove all residues.
 - Use plenty of water to prevent cleaner from drying on the surface, which could lead to streaks or spots.
-

Drying

5

Allow the surface to air dry completely. Use clean, dry cloths if necessary to avoid water spots. Air drying can be more effective as you can wash again if dirt is visible.

Final Inspection

6

Inspect the surface for remaining stains or spots. Repeat the cleaning process on stubborn areas if necessary.



Safety and handling

Hazards identification

Eloxalreiniger FA is a irritating substance. It may cause eye, skin, and respiratory irritation.

Handling & storage

Store in a cool, dry, well-ventilated area. Keep container tightly closed. Avoid contact with skin and eyes. When handling, use PPE such as gloves and goggles.

First aid measures

- **Inhalation:** Move to fresh air immediately. Seek medical attention if breathing difficulties occur.
- **Skin contact:** Wash affected area with water. Remove contaminated clothing. Seek medical advice if irritation persists.
- **Eye contact:** Rinse with plenty of water for at least 15 minutes. Seek medical attention if irritation persists.
- **Ingestion:** Do not induce vomiting. Rinse mouth and seek medical attention immediately.

Personal protection

- **Respiratory protection:** Use appropriate respiratory protection if ventilation is inadequate.
- **Skin protection:** Wear protective gloves and clothing.
- **Eye protection:** Use safety goggles or face shield.
- **Ingestion:** Do not induce vomiting. Rinse mouth and seek medical attention immediately.

***Environmental considerations:** Dispose of wastewater and cleaning residues according to local environmental regulations.